

# P1 Filter Change Instructions



Diagram 1: Pre-Filters

Diagram 2: Shut off valve



blue shut off  
valve location

The blue cap is in  
on position (water is flowing)



The blue cap is in  
off position (water is not flowing)

1. Locate Pre Filters under the sink. (diagram 1)
2. Shut off the water flow at the blue shut off valve attached to the "IN" water line of the pre filters. (diagram 2)
3. Run the water on both sides of the faucet to make sure no more water is coming out.
4. Twist off P1 filter by turning it clockwise until it stops and then pull vertically down to remove.
5. "Align" the new P1 filter under the empty slot properly. Once aligned push it vertically up and then turn counter-clockwise until it stops.
6. Turn on the water flow at the blue shut off valve. (diagram 2)
7. Flush the system for 3-5 mins.
8. Check and make sure there are no leaks.

Contact Us;  
1-888-850-3743  
customerservice@springaqua.com